

COMPACT HIGH POWER RELAY

1 POLE - 25A (For automotive applications)

FBR51 Latching Series

■ FEATURES

- Magnetically latched PCB relay
- Increased ambient temperature range up to 125°C
- Two coils with set and reset function
- Reflow soldering capable
- Two types of contact materials
- RoHS compliant

Please see page 6 for more information



■ Part Numbers

[Example]	FBR51	N	L	2	10	-	W1	-	RW
	(a)	(b)	(c)	(d)	(e)	(f)	(g)		

(a)	Relay type	FBR51 : FBR51 series
(b)	Enclosure	N : Plastic sealed type
(c)	Operating function	L : Latching type
(d)	Coil type	2 : Double coil
(e)	Coil rated voltage	10 : 10VDC
(f)	Contact material	W1 : AgSnO ₂ In E : AgNi
(g)	Mounting process	RW : Through hole reflow (THR)

* E (AgNi) versions used for special low current applications that require lower contact resistance (dark current applications)

Actual markings does not carry the type name: "FBR"

E.g.: Ordering code: FBR51NL210-W1-RW Actual marking: 51NL210-W1-RW

FBR51 Series

■ Specifications

Item	FBR51		Remarks / conditions
	W1 contact	E contact	
Contact data	Configuration	1 form C	
	Material	AgSnO ₂ In	AgNi
	Voltage drop	Max. 100 mV at 1A, 12VDC	Max. 100 mV at 2A, 12VDC
	Contact rating	25A at 14VDC	
	Max. carrying current	30A / 1 hour	
	Max. switching voltage	16VDC	
	Max. switching current	35A	
Coil	Min. switching load*	1A 6VDC	0.1A 5VDC
	Operating ambient temperature range	-40°C ~ +125°C	
Timing data	Set / reset	Max. 5 ms (without bounce)	
Life	Mechanical	Min. 1 x 10 ⁶ operations	
	Electrical	Min. 200 x 10 ³ operations 14VDC 25A (Locked motor load)	Min. 50 x 10 ³ operations, 14VDC 25A (Locked motor load)
Insulation**	Insulation resistance	Min. 100MΩ at 500VDC	
	Dielectric strength	Open contacts	500VAC (50/60Hz), 1 minute
		Coil contact	500VAC (50/60Hz), 1 minute
Other	Vibration resistance	Misoperation	10 to 200Hz, acceleration 44m/s ² (4.5G) maximum
		Endurance	10 to 200Hz, acceleration 44m/s ² (4.5G) maximum
	Shock resistance	Misoperation	100m/s ² (11±1ms)
		Endurance	1,000m/s ² (6±1ms)
	Sealing		Plastic sealed RT III
	Dimensions / weight		12.1 x 15.5 x 13.7 mm / approx. 6g

* Minimum switching loads mentioned above are reference values. Please perform the confirmation test with actual load before production since reference values may vary according to switching frequencies, environmental conditions and expected reliability levels.

Care shall be taken on the heat generated on PC board when maximum carrying current exceeds 10A. Please perform the confirmation test with actual conditions.

**: Values of insulation are under 20°C ± 15°C, 65 ± 20%.

FBR51 Series

■ Coil Data

Coil code	Coil Resistance +/-10% (Ω)	Set Voltage* (VDC)	Reset Voltage* (VDC)
10	P90	+6.3 (20°C) +8.9(125°C)	-
	S90	-	+6.3 (20°C) +8.9(125°C)

P: Set coil
S: Reset coil



Note: All values in the table are valid at 20°C and zero contact current, unless otherwise specified.

*: Specified operate values are valid for pulse wave voltage.

Please use at rated coil voltage. Please refer to characteristic data and set up adequate voltage in case of use at over voltage.


■ Dimensions

• Dimensions

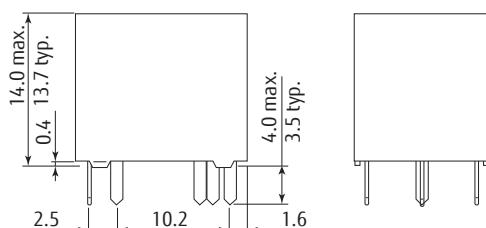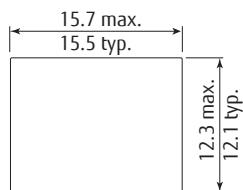


Dimensions of the terminals do not include thickness of pre-solder.

• Schematics (BOTTOM VIEW)

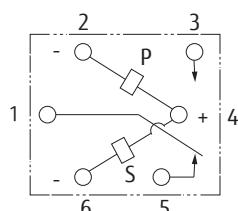

• PC Board Mouting Hole Layout (BOTTOM VIEW)

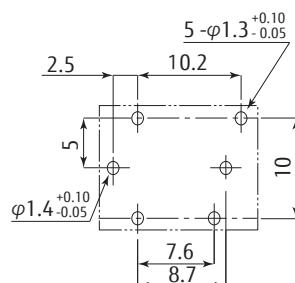

Schematic above is in reset condition.




Coil polarity: Please see page 5.

Tolerance of PC board mounting hole layout: ± 0.1 unless otherwise specified.



(): Reference value
Unit: mm

FBR51 Series


■ Characteristic Data (Reference)

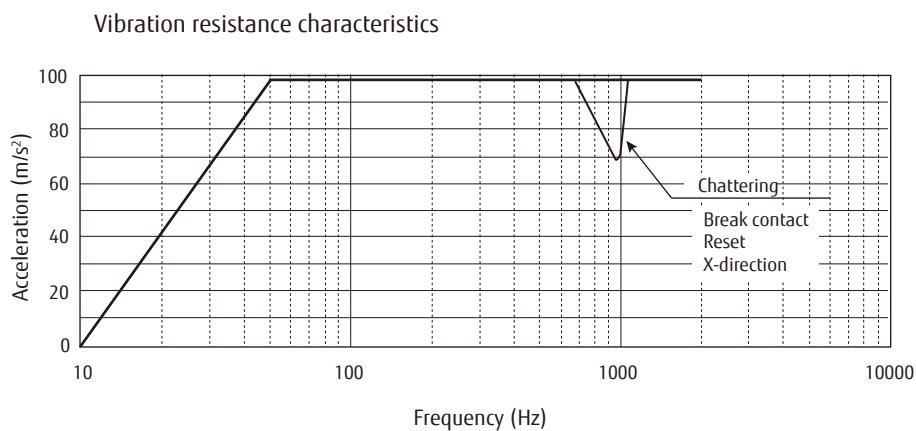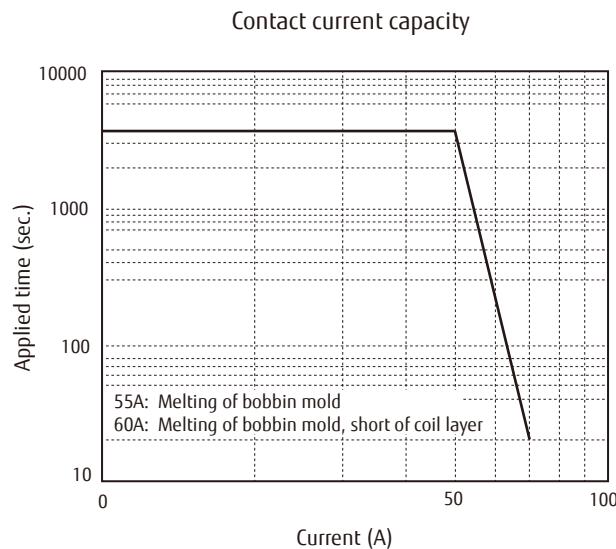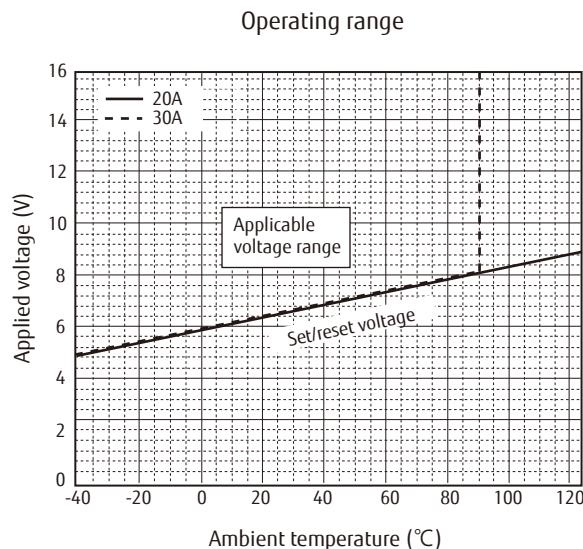

Frequency: 10 to 2000Hz
Acceleration: 98m/s² max.
Shock direction: See diagram below
Detection level: Chatter > 1ms

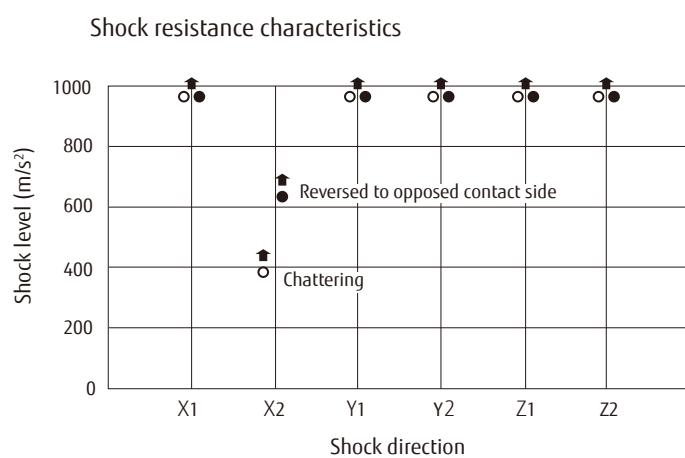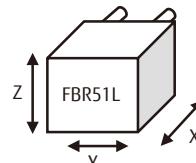

Shock application time: 6±1ms half-sine wave
Test conditions: Coil energized and de-energized
Shock direction: See diagram below
Detection level: Chatter > 1ms

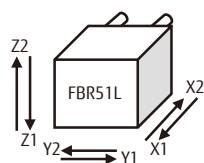

● : Reversed from reset to set
○ : Break contact (reset)
Make contact: Min. 980m/s² at all directions

FBR51 Series

■ Coil Polarity

Terminal Number	2	4	6
Set	-	+	
Reset		+	-

Cautions

- All values mentioned in this datasheet are provided under ideal conditions. Please perform the confirmation test before actual use.
- Please connect relay coils according to specified polarity.
- Do not use relays in the atmosphere with sulfide gas, chloride gas or nitric oxide. Contact resistance may increase.
- Do not use silicon or silicon-containing product or materials near relays. It may cause contact failure.

Cautions about latching relay

- Latching relays are shipped in the state set, but state may change due to shock during transportation or mounting. Before using the relays, it is advisable to bring the relays in necessary state (set or reset) and program a circuit sequence. Otherwise, it will or will not operate simultaneously with power activation.

GENERAL INFORMATION

1. ROHS Compliance

- All relays produced by Fujitsu Components are compliant with RoHS directive 2011/65/EU including amendments.
- Use of Cadmium in electrical contacts is exempted as per Annex III of the RoHS directive 2001/65/EU. Please consider expiry date of exemption. Relays with Cadmium containing contacts are not to be used for new designs.
- All relays are lead-free. Please refer to Lead-Free Status Info for older date codes at:
<http://www.fujitsu.com/downloads/MICRO/fcai/relays/lead-free-letter.pdf>

2. Recommended lead free solder condition

Flow Solder Condition:


Pre-heating: maximum 120 °C
within 90 sec.
Soldering: dip within 5 sec. at
255 °C ± 5 °C solder bath
Relay must be cooled by air immediately
after soldering

Solder by Soldering Iron:

Soldering Iron 30-60W
Temperature: maximum 350-360 °C
Duration: maximum 3 sec.

Recommended reflow soldering profile IRS (infrared reflow soldering)

Peak temperature: Max.250°C

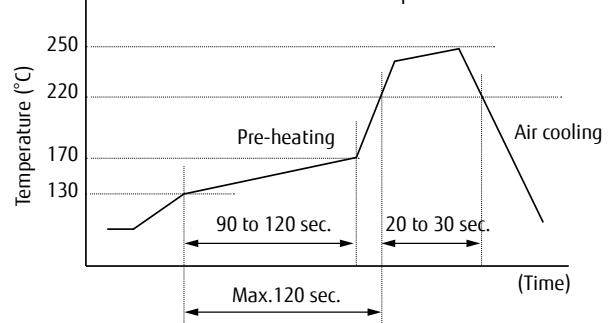

Important Notes for Reflow Soldering

- Temperature shall be measured at PC board upper surface.
- Temperature at PC board upper surface may be changed depending on size of PC board, components mounted on the PC board and/or heating method. Please perform the confirmation test with your actual PC boards.
- Recommended solder for assembly: Sn-3.0 Ag-0.5 Cu.

We highly recommend that you confirm your actual solder conditions

3. Moisture Sensitivity

- Moisture Sensitivity Level standard is not applicable to electromechanical relays, unless otherwise indicated. -RW THR relay will be shipped in moisture barrier bag.

4. Tin Whiskers

- Dipped SnAgCu solder is known as presenting a low risk to tin whisker development. No considerable length whisker was found by our in house test.

FBR51 Series

Fujitsu Components International Headquarter Offices

Japan FUJITSU COMPONENT LIMITED Shinagawa Seaside Park Tower 19F, 12-4, Higashi-shinagawa 4-chome, Shinagawa-ku, Tokyo,140-0002, Japan Tel: (81-3) 3450-1682 Fax: (81-3) 3474-2385 Email: fcl-contact@cs.jp.fujitsu.com Web: www.fujitsu.com/jp/fcl	Asia Pacific FUJITSU COMPONENTS ASIA, LTD. 102E Pasir Panjang Road #01-01 CitiLink Warehouse Complex Singapore 118529 Tel: (65) 6375-8560 Fax: (65) 6273-3021 Email: fcal@sg.fujitsu.com Web: www.fujitsu.com/sg/products/devices/components	Korea FUJITSU COMPONENTS KOREA LIMITED Alpha Tower #403, 645 Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, 13524 Korea Tel: (82) 31-708-7108 Fax: (82) 31-709-7108 Email: fcal@sg.fujitsu.com www.fujitsu.com/sg/products/devices/components
North and South America FUJITSU COMPONENTS AMERICA, INC 2290 North First Street, Suite 212 San Jose, CA 95131, USA Tel: (1-408) 745-4900 Fax: (1-408) 745-4970 Email: components@us.fujitsu.com Web: us.fujitsu.com/components	China FUJITSU ELECTRONIC COMPONENTS (SHANGHAI) CO., LTD. Unit 4306, InterContinental Center 100 Yu Tong Road, Shanghai 200070, China Tel: (86-21) 3253 0998 Fax: (86-21) 3253 0997 Email: fcsh@cn.fujitsu.com Web: www.fujitsu.com/cn/products/devices/components	
Europe FUJITSU COMPONENTS EUROPE B.V. Diamantlaan 25 2132 WV Hoofddorp Netherlands Tel: (31-23) 5560910 Fax: (31-23) 5560950 Email: info@fceu.fujitsu.com Web: www.fujitsu.com/uk/components	Hong Kong FUJITSU COMPONENTS HONG KONG CO., LTD Unit 506, Inter-Continental Plaza No.94 Granville Road, Tsim Sha Tsui, Kowloon, Hong Kong Tel: (852) 2881-8495 Fax: (852) 2894-9512 Email: fcal@sg.fujitsu.com Web: www.fujitsu.com/sg/products/devices/components	

©2021 Fujitsu Components Europe B.V. All rights reserved. All trademarks or registered trademarks are the property of their respective owners.

The contents, data and information in this datasheet are provided by Fujitsu Component Ltd. as a service only to its user and only for general information purposes. The use of the contents, data and information provided in this datasheet is at the users' own risk.

Fujitsu has assembled this datasheet with care and will endeavor to keep the contents, data and information correct, accurate, comprehensive, complete and up to date.

Fujitsu Components Europe B.V. and affiliated companies do however not accept any responsibility or liability on their behalf, nor on behalf of its employees, for any loss or damage, direct, indirect or consequential, with respect to this datasheet, its contents, data, and information and related graphics and the correctness, reliability, accuracy, comprehensiveness, usefulness, availability and completeness thereof.

Nor do Fujitsu Components Europe B.V. and affiliated companies accept on their behalf, nor on behalf of its employees, any responsibility or liability with respect to these datasheets, its contents, data, information and related graphics and the correctness, reliability, accuracy, comprehensiveness, usefulness, availability and completeness thereof. Rev. March 10th, 2021